

George Roberts

Worldwide Suppliers and Distributors
of Scaffolding and Access Equipment

Universal Up and Over Loading Bay Gate

INSTRUCTIONS FOR ASSEMBLY AND USE



For System
Scaffolds

For Tube and
Fitting Scaffolds



Tel: +44 (0)151 524 2434



www.scaffoldingsales.com



Universal Up and Over Loading Bay Gate

1.0 Description

According to statutory instrument 2005 No. 735, The Work at Height Regulations 2005. It is necessary for all employers to provide means of fall protection wherever practicable to persons working at height.

The Universal Loading Bay Gates System fulfils these requirements for the safeguarding of persons working at height on a loading bay.

It is easily and quickly assembled using 4 basic components.




- 2.0 Gate Arms
- Gate Front
- Pivot Hinges
- Ledger Tubes

2.1 Tools Required

19mm Spanner or (adjustable)
Scaffold Spanner

3.0 Assembly Instructions

- 3.1 Secure pivot hinge to top ledger approx 1m from front of Bay (Adjust later to suit).

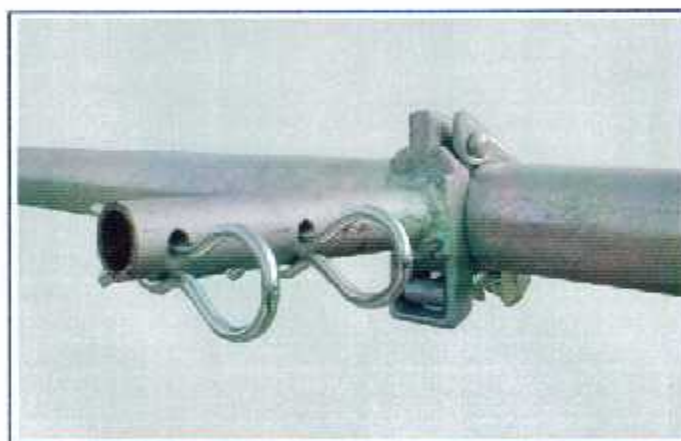

George Roberts

Worldwide Suppliers and Distributors
of Scaffolding and Access Equipment

NASC



www.scaffoldingsales.com

Universal Up and Over Loading Bay Gate

3.2 Place Arms on hinges and secure with spring clips.



3.3 Attach front of Gate using 120 x 12mm Nut and Bolt.



3.4 Fit Ledger Tubes to Back Rail and secure with Scaffold fitting.



3.5 Finally adjust Gate Position to suit front of Loading Bay.

Tel : +44 (0)151 524 2434
Fax : +44 (0)151 524 2430
Email : sales@scaffoldingsales.com

Unit D • Wakefield Road • Netherton • Liverpool • L30 6TL

TUBE - FITTINGS - BOARDS - LADDERS
PROPS - FORMWORK - FENCING - BEAMS
KWIKSTAGE - CUPLOCK - SAFETY EQUIPMENT



George Roberts

Worldwide Suppliers and Distributors
of Scaffolding and Access Equipment



www.scaffoldingsales.com

4.0 Operation of Gate

- 4.1 To open gate pull the ledger at head height towards you, using the second ledger as it comes into reach, continue until gate legs rest on platform.
- 4.2 To close gate pull upwards on top ledger at the back of gate until lower ledge comes into reach and lower the gate into closed position until gate rests on platform.

Important: Never allow Gate to slam open or shut as this may result in damage to the loading bay

The Gate must only be installed by competent personnel familiar with these instructions.

All personnel must wear and use suitable PPE equipment required to carry out the above task.

Tel : +44 (0)151 524 2434
Fax : +44 (0)151 524 2430
Email : sales@scaffoldingsales.com

TUBE - FITTINGS - BOARDS - LADDERS
PROPS - FORMWORK - FENCING - BEAMS
KWIKSTAGE - CUPLOCK - SAFETY EQUIPMENT

Unit D • Wakefield Road • Netherton • Liverpool • L30 6TL